


**NOTE :** Cabin and landing call button connections are suitable for parallel system in this drawing.  
Cabin calls are connected to cabin communication board if system is cabin serial landings parallel.

**WARNING !**  
For group lifts according to EN81-1 and EN81-2 matter 14.2.4.3:  
**NOTE:**For groups of lifts, position indicators on the landings are not recommended. However, it is recommended that the arrival of a car be preceded by an audible signal.


Connections on this diagram are for full collective systems.  
For simple collective, simple push-button and one-way collective systems connect only one button.

**FLOOR INDICATOR**

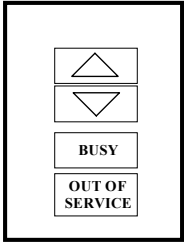

 UP : Up Arrow (32)  
DOWN : Down Arrow (31)  
BUSY : Busy (12)  
INS. : Out Of Service (39)

B- L+ UP CALL BUTTON  
B+ L- DOWN CALL BUTTON



**BOTTOM FLOOR**

F/7.5.5.02.67

This document is a sample for applications. All information contained in these materials are subject to change by Aybey Elektronik without notice. Aybey Elektronik assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.

AC DUPLEX CONNECTIONS			
AYBEY ELEKTRONIK	SERIES	AC	DRW.
	PROJ.	AC033	APPRV.
	REV.	01	DATE
			M. AKKUŞ
			M. AYBEY
			06 JULY 11